


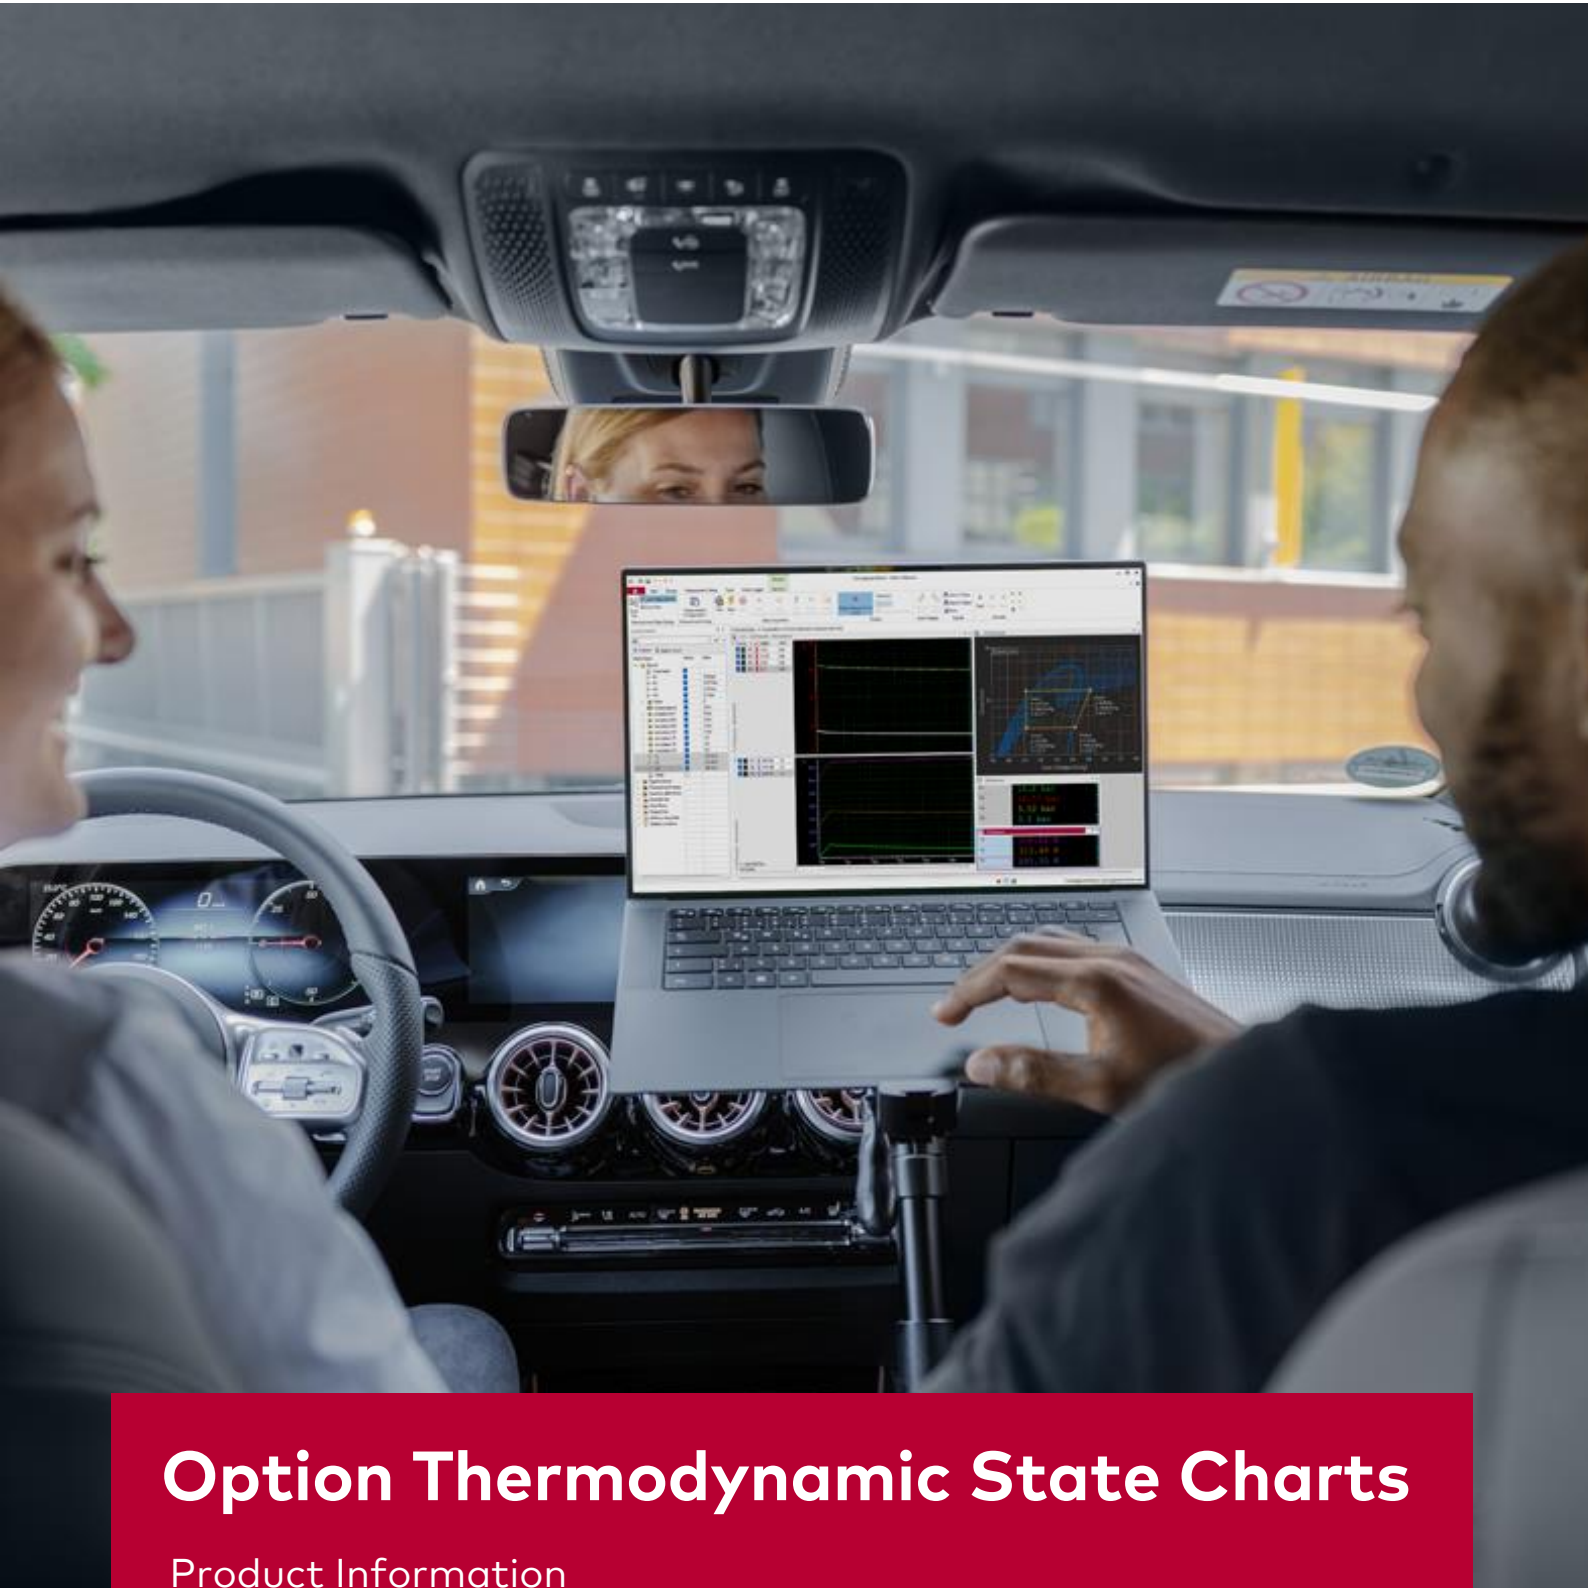

Option Thermodynamic State Charts

Product Information

Table of Contents

1 Overview 3

1.1 Introduction 3

1.2 Overview of Advantages 3

1.3 System Requirements..... 4

1.4 Further Information 4

2 Functions..... 4

3 Training 5

1 Overview

1.1 Introduction

During the development and testing of all types of air conditioning and cooling systems, physical variables such as pressure and temperature are recorded at the test bench or test vehicle – usually together with other measured signals and internal controller values. To evaluate the system configuration and the employed components and coolants, engineers working in the field of air conditioning technology need specific ways of visualizing thermodynamic data.

With the option Thermodynamic State Charts for CANape, vSignalizer and vMeasure, you can now also display thermodynamic data synchronized with other measured data and generate highly informative state charts for online* and offline analysis.

* = Online analysis only possible with CANape and vMeasure

1.2 Overview of Advantages

- > Many different possible configurations for the individual design of the state chart types that are available for selection.
- > Selection of thermophysical properties from the extensive TILMedia materials library from the specialist TLK-Thermo permit the use of both real gases and mixtures.
- > Online calculation of the state charts and consequently also individual adaptation of the isolines

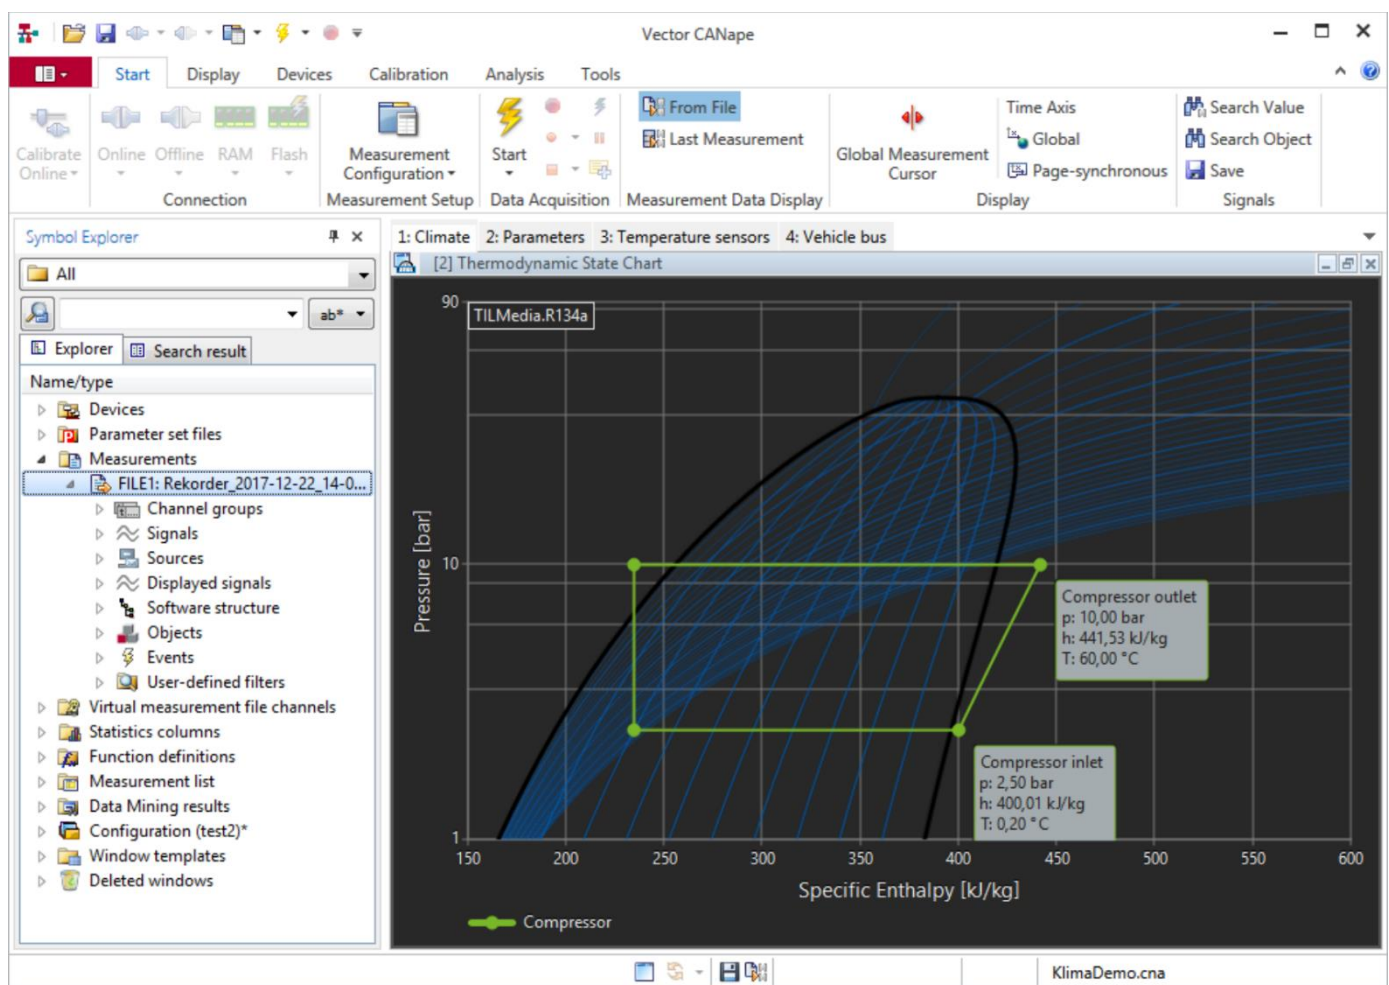


Figure 1: Professional display of thermodynamic state charts

1.3 System Requirements

The option Thermodynamic State Chart is supported as of:

- > CANape version 16.0
- > vMeasure version 2.0
- > vSignalizer version 16.0

1.4 Further Information

Various documents are available on the web for CANape, vMeasure and vSignalizer. In addition, you will find further valuable expertise in the form of specialist articles and application notes. For more information, visit the [Vector Download Center](#).

2 Functions

The option Thermodynamic State Charts makes it possible to generate individually designed thermodynamic state charts in just a few clicks. These simplify the online analysis of automotive cooling cycles, for example.

You can choose between the following types of charts:

- > Pressure-enthalpy (ph)
- > Pressure-specific volumes (pv)
- > Pressure-temperature (pT)
- > Temperature-enthalpy (Th)
- > Temperature-entropy (Ts)

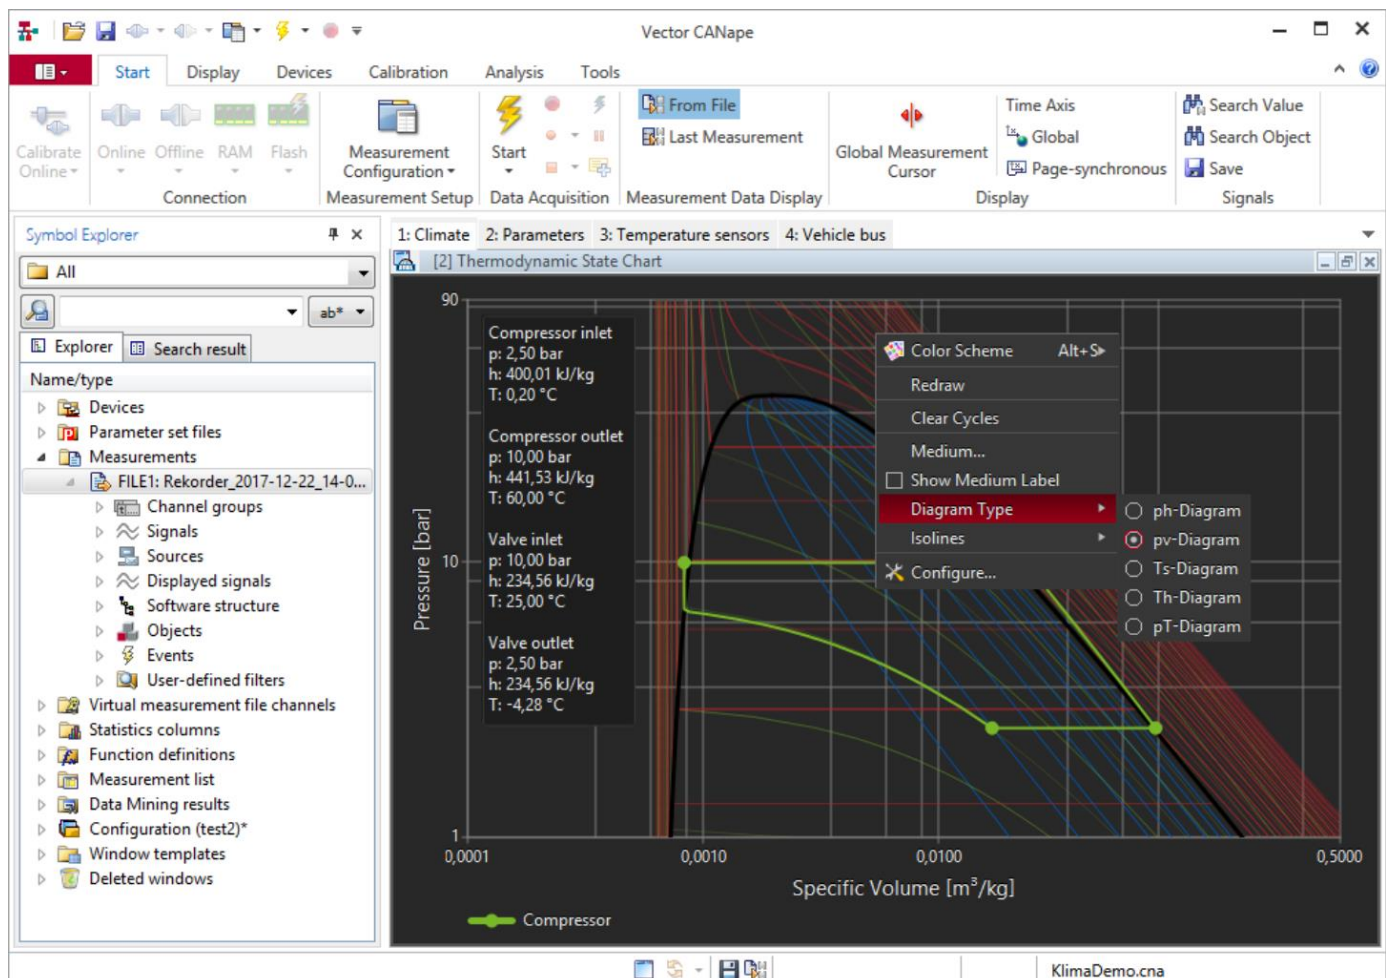


Figure 2: Switch between different chart types at a single click

When configuring your chart, you can choose from a wide range of materials and even mixed materials are possible. The variables that are relevant for the displayed state chart are calculated from the measured signals, for example for temperature and pressure, based on the material data. It is possible to determine missing cycle reference points.

3 Training

Our training program includes various training courses and workshops for CANape and vSignalizer, both in our seminar rooms and on-site at the customer's premises.

You will find more information on the individual training events and dates on the web at: www.vector-academy.com



Get More Information

Visit our website for:

- > News
- > Products
- > Demo software
- > Support
- > Training classes
- > Addresses

www.vector.com